

The Embedded I/O Company



TDRV004-SW-82

Linux Device Driver

Reconfigurable FPGA

Version 1.0.x

User Manual

Issue 1.0.0

September 2005

TEWS TECHNOLOGIES GmbH

Am Bahnhof 7
Phone: +49-(0)4101-4058-0
e-mail: info@tews.com

25469 Halstenbek / Germany
Fax: +49-(0)4101-4058-19
www.tews.com

TEWS TECHNOLOGIES LLC

1 E. Liberty Street, Sixth Floor
Phone: +1 (775) 686 6077
e-mail: usasales@tews.com

Reno, Nevada 89504 / USA
Fax: +1 (775) 686 6024
www.tews.com

TDRV004-SW-82

Reconfigurable FPGA

Linux Device Driver

This document contains information, which is proprietary to TEWS TECHNOLOGIES GmbH. Any reproduction without written permission is forbidden.

TEWS TECHNOLOGIES GmbH has made any effort to ensure that this manual is accurate and complete. However TEWS TECHNOLOGIES GmbH reserves the right to change the product described in this document at any time without notice.

TEWS TECHNOLOGIES GmbH is not liable for any damage arising out of the application or use of the device described herein.

©2005 by TEWS TECHNOLOGIES GmbH

Issue	Description	Date
1.0.0	First Issue	September 30, 2005

Table of Contents

1	INTRODUCTION.....	4
2	INSTALLATION.....	5
2.1	Build and install the device driver.....	5
2.2	Uninstall the device driver	5
2.3	Install device driver into the running kernel	6
2.4	Remove device driver from the running kernel	6
2.5	Change Major Device Number	7
3	DEVICE INPUT/OUTPUT FUNCTIONS	8
3.1	open()	8
3.2	close().....	10
3.3	ioctl()	11
3.3.1	TD004_IOC_XSVFPLAY	13
3.3.2	TD004_IOCTL_XSVFPOS	15
3.3.3	TD004_IOCTL_XSVFLASTCMD	16
3.3.4	TD004_IOCTL_RECONFIG	17
3.3.5	TD004_IOCTL_SETWAITSTATES	18
3.3.6	TD004_IOC_SETCLOCK	19
3.3.7	TD004_IOC_SPIWRITE	22
3.3.8	TD004_IOCTL_SPIREAD	24
3.3.9	TD004_IOC_PLXWRITE	26
3.3.10	TD004_IOCTL_PLXREAD	28
3.3.11	TD004_IOCTL_READ_UCHAR	30
3.3.12	TD004_IOCTL_READ_USHORT.....	32
3.3.13	TD004_IOCTL_READ_ULONG	34
3.3.14	TD004_IOC_WRITE_UCHAR.....	36
3.3.15	TD004_IOC_WRITE_USHORT	38
3.3.16	TD004_IOC_WRITE_ULONG	40
4	DIAGNOSTIC.....	42

1 Introduction

The TDRV004-SW-82 Linux device driver allows the operation of the TPMC630 product family on Linux operating systems.

The TDRV004 device driver includes the following features:

- Program and reconfigure onboard FPGA
- Program onboard clock generator using the Serial Programming Interface (SPI)
- Read/write FPGA registers (32bit / 16bit / 8bit)
- Read/write EEPROM blocks located in clock device using the Serial Programming Interface (SPI)
- Read/write specific PLX9030 registers

Supported Modules:

TPMC630

To understand all features of this device driver, it is important to read the TPMC630 family Hardware User Manual.

2 Installation

The directory TDRV004-SW-82 on the distribution media contains the following files:

TDRV004-SW-82.pdf	This manual in PDF format
TDRV004-SW-82-SRC.tar.gz	GZIP compressed archive with driver source code
fpgaexa.tar.gz	FPGA example XSVF
Release.txt	Release information

The GZIP compressed archive TDRV004-SW-82-SRC.tar.gz contains the following files and directories:

tdrv004.c	Driver source code
tdrv004def.h	Driver include file
tdrv004.h	Driver include file for application program
pf_micro.c	XSVF player functions (Platform Flash)
pf_micro.h	header file for XSVF player functions
pf_lenval.c	special functions for XSVF player
pf_lenval.h	header file for XSVF functions
pf_ports.c	hardware layer for XSVF player
pf_ports.h	header file for XSVF hardware layer
Makefile	Device driver make file
makenode	Script for device node creation
tpmodule.c	Driver independent library
tpmodule.h	Driver independent library header file
Example/tdrv004example.c	Example application
Example/Makefile	Example application makefile

In order to perform an installation, extract all files of the archive TDRV004-SW-82.tar.gz to the desired target directory. Additionally, copy *tdrv004.h* into your include path.

2.1 Build and install the device driver

- Login as *root*
- Change to the target directory
- To create and install the driver in the module directory */lib/modules/<version>/misc* enter:

make install

- To update the device driver's module dependencies, enter:

depmod -aq

2.2 Uninstall the device driver

- Login as *root*
- Change to the target directory
- To remove the driver from the module directory */lib/modules/<version>/misc* enter:

make uninstall

2.3 Install device driver into the running kernel

- To load the device driver into the running kernel, login as root and execute the following commands:

```
# modprobe tdrv004drv
```

- After the first build or if you are using dynamic major device allocation it's necessary to create new device nodes on the file system. Please execute the script file *makenode* to do this. If your kernel has enabled the device file system (devfs) then you have to skip running the *makenode* script. Instead of creating device nodes from the script the driver itself takes creating and destroying of device nodes in its responsibility.

```
# sh makenode
```

On success the device driver will create a minor device for each TDRV004 device found. The first channel of the first TPMC630 family module can be accessed with device node `/dev/tdrv004_0`, the second module with device node `/dev/tdrv004_1` and so on.

The assignment of device nodes to physical TPMC630 family modules depends on the search order of the PCI bus driver.

2.4 Remove device driver from the running kernel

- To remove the device driver from the running kernel login as root and execute the following command:

```
# modprobe -r tdrv004drv
```

If your kernel has enabled devfs, all `/dev/tdrv004_x` nodes will be automatically removed from your file system after this.

Be sure that the driver isn't opened by any application program. If opened you will get the response "*tdrv004drv: Device or resource busy*" and the driver will still remain in the system until you close all opened files and execute *modprobe -r* again.

2.5 Change Major Device Number

This paragraph is only for Linux kernels without DEVFS installed. The TDRV004 driver uses dynamic allocation of major device numbers per default. If this isn't suitable for the application it is possible to define a major number for the driver.

To change the major number, edit the file `tdrv004def.h`, change the following symbol to appropriate value and enter `make install` to create a new driver.

`TDRV004_MAJOR` Valid numbers are in range between 0 and 255. A value of 0 means dynamic number allocation.

Example:

```
#define TDRV004_MAJOR 122
```

3 Device Input/Output functions

This chapter describes the interface to the device driver I/O system.

3.1 open()

NAME

open() opens a file descriptor.

SYNOPSIS

```
#include <fcntl.h>
```

```
int open (const char *filename, int flags)
```

DESCRIPTION

The **open** function creates and returns a new file descriptor for the file named by *filename*. The *flags* argument controls how the file is to be opened. This is a bit mask. Create the value by the bitwise OR of the appropriate parameters (using the | operator in C). See also the GNU C Library documentation for more information about the open function and open flags.

EXAMPLE

```
int fd;  
  
fd = open("/dev/tdrv004_0", O_RDWR);
```

RETURNS

The normal return value from **open** is a non-negative integer file descriptor. In case of an error, a value of -1 is returned. The global variable *errno* contains the detailed error code.

ERRORS

`E_NODEV` The requested minor device does not exist.

This is the only error code returned by the driver, other codes may be returned by the I/O system during open. For more information about open error codes, see the *GNU C Library description – Low-Level Input/Output*.

SEE ALSO

GNU C Library description – Low-Level Input/Output

3.2 close()

NAME

close() closes a file descriptor.

SYNOPSIS

```
#include <unistd.h>
```

```
int close (int filedes)
```

DESCRIPTION

The **close** function closes the file descriptor *filedes*.

EXAMPLE

```
int fd;

. . .

if (close(fd) != 0) {
    /* handle close error conditions */
}
```

RETURNS

The normal return value from **close** is 0. In case of an error, a value of -1 is returned. The global variable *errno* contains the detailed error code.

ERRORS

E_NODEV The requested minor device does not exist.

This is the only error code returned by the driver, other codes may be returned by the I/O system during close. For more information about close error codes, see the *GNU C Library description – Low-Level Input/Output*.

SEE ALSO

GNU C Library description – Low-Level Input/Output

3.3 ioctl()

NAME

ioctl() device control functions

SYNOPSIS

```
#include <sys/ioctl.h>
```

```
int ioctl(int fildes, int request [, void *argp])
```

DESCRIPTION

The **ioctl** function sends a control code directly to a device, specified by *fildes*, causing the corresponding device to perform the requested operation.

The argument *request* specifies the control code for the operation. The optional argument *argp* depends on the selected request and is described for each request in detail later in this chapter.

The following ioctl codes are defined in *tdrv004.h*:

Value	Meaning
TD004_IOCS_XSVFPLAY	Play an XSVF file for FPGA programming
TD004_IOCG_XSVFPOS	Retrieve current play-position in XSVF file
TD004_IOCG_XSVFLASTCMD	Get the last executed XSVF command
TD004_IOC_RECONFIG	Trigger FPGA reconfiguration process
TD004_IOCTL_SETWAITSTATES	Specify number of waitstates for programming
TD004_IOCS_SETCLOCK	Set clock generator parameters
TD004_IOCS_SPIWRITE	Write values to clock generator
TD004_IOCG_SPIREAD	Read values from clock generator
TD004_IOCS_PLXWRITE	Write 16bit value to PLX9030 EEPROM
TD004_IOCG_PLXREAD	Read 16bit value from PLX9030 EEPROM
TD004_IOCG_READ_UCHAR	Read unsigned char values from FPGA resource
TD004_IOCG_READ_USHORT	Read unsigned short values from FPGA resource
TD004_IOCG_READ_ULONG	Read unsigned long values from FPGA resource
TD004_IOCS_WRITE_UCHAR	Write unsigned char values to FPGA resource
TD004_IOCS_WRITE_USHORT	Write unsigned short values to FPGA resource
TD004_IOCS_WRITE_ULONG	Write unsigned long values to FPGA resource

See below for more detailed information on each control code.

To use these TDRV004 specific control codes the header file *tdrv004.h* must be included in the application.

RETURNS

On success, zero is returned. In case of an error, a value of -1 is returned. The global variable *errno* contains the detailed error code.

ERRORS

EINVAL Invalid argument. This error code is returned if the requested ioctl function is unknown. Please check the argument *request*.

Other function dependant error codes will be described for each ioctl code separately. Note, the TDRV004 device driver always returns standard Linux error codes.

SEE ALSO

ioctl man pages

3.3.1 TD004_IOCS_XSVFPLAY

NAME

TD004_IOCS_XSVFPLAY Play an XSVF file for FPGA programming

DESCRIPTION

This ioctl function programs the FPGA with a supplied XSVF file. A pointer to the caller's data buffer (TD004_XSVF_BUF), where the content of the XSVF file is stored, is passed to the device driver. For information on building an XSVF file, please refer to the Engineering Documentation of the TDRV004 product family.

The device driver is not able to verify the XSVF file, so please make sure that the supplied XSVF is of a valid file format.

The *TD004_XSVF_BUF* structure has the following layout:

```
typedef struct {
    unsigned long   size;
    unsigned char  pData[1];    /* dynamically expandable */
} TD004_XSVF_BUF;
```

Members

size

Specifies the total size of the supplied XSVF data.

pData

This dynamically expandable array holds the XSVF data. The data must be included inside the TD004_XSVF_BUF structure.

Programming Hints

Depending on the XSVF file, there might be a waiting period of approx. 15 seconds at the beginning of programming. The programming of the delivered FPGA example design XSVF file should not take much longer than 1 minute, depending on the system load.

If the programming fails, try to increase the used waitstates with control function DCMD_TD004_SETWAITSTATES (refer to the corresponding section in this manual). Additionally, the CLK1 should not be lower than 10MHz for programming.

EXAMPLE

```
#include "tdrv004.h"

int fd;
int result;
int bufsize;
TD004_XSVF_BUF *pXsvfBuf;

/*
** allocate enough memory (about 3MB) to hold XSVF content
*/
bufsize = sizeof(TD004_XSVF_BUF) + 3000000*sizeof(unsigned char);
pXsvfBuf = (TD004_XSVF_BUF*)malloc( bufsize );

/*
** read XSVF content from file and store it inside pXsvfBuf->pData[]
*/

/*
** start FPGA programming
*/
result = ioctl(fd, TD004_IOC_XSVFPLAY, pXsvfBuf);

if (result < 0) {
    /* handle ioctl error */
}
free( pXsvfBuf );
```

ERRORS

EINVAL	There was an error during XSVF processing.
EINTR	The function was cancelled.
EFAULT	Error while copying data to or from user space.
EBUSY	The device is already busy with XSVF, Reconfig or SPI action.
ENOMEM	Error getting enough internal memory for XSVF data.

Other returned error codes are system error conditions.

SEE ALSO

ioctl man pages

3.3.2 TD004_IOCTL_XSVFPOS

NAME

TD004_IOCTL_XSVFPOS Retrieve current play-position in XSVF file.

DESCRIPTION

This TDRV004 control function returns the number of the current processed byte in the XSVF file during programming with TD004_IOCTL_XSVFPLAY. This control function can be used to monitor the programming progress. A pointer to an unsigned long value is passed to the driver by the argument *argp*.

EXAMPLE

```
#include "tdrv004.h"

int fd;
int result;
unsigned long XsvfPos;

result = ioctl(fd, TD004_IOCTL_XSVFPOS, &XsvfPos);

if (result < 0) {
    /* handle ioctl error */
} else {
    printf("Current XSVF position: %d\n", XsvfPos);
}
```

ERRORS

 EFAULT Error while copying data to user space.
Other returned error codes are system error conditions.

SEE ALSO

ioctl man pages

3.3.3 TD004_IOCTL_XSVFLASTCMD

NAME

TD004_IOCTL_XSVFLASTCMD Get the last executed XSVF command.

DESCRIPTION

This TDRV004 control function returns the number of the last executed XSVF command. This value can be used to find errors inside the supplied XSVF file. This value refers to the line inside the ASCII SVF file. A pointer to an unsigned long value is passed to the driver by the argument *argp*.

EXAMPLE

```
#include "tdrv004.h"

int fd;
int result;
unsigned long XsvfLastCmd;

result = ioctl(fd, TD004_IOCTL_XSVFLASTCMD, &XsvfLastCmd);

if (result < 0) {
    /* handle ioctl error */
} else {
    printf("Last XSVF command: %d\n", XsvfLastCmd);
}
```

ERRORS

EFAULT Error while copying data to user space.
Other returned error codes are system error conditions.

SEE ALSO

ioctl man pages

3.3.4 TD004_IOC_RECONFIG

NAME

TD004_IOC_RECONFIG Trigger FPGA reconfiguration process.

DESCRIPTION

This function starts the reconfiguration process of the FPGA. This control function must be called after the FPGA is programmed using DCMD_TD004_XSVFPLAY. The function returns after the reconfiguration is done, or an error occurred. No additional parameter is used for this function, so the optional argument can be omitted.

EXAMPLE

```
#include "tdrv004.h"

int fd;
int result;

result = ioctl(fd, TD004_IOC_RECONFIG);

if (result < 0) {
    /* handle ioctl error */
}
```

ERRORS

EIO	An error occurred during reconfiguration. This may be caused by an invalid FPGA content located inside the XSVF file.
EBUSY	The device is already busy with XSVF, Reconfig or SPI action.

Other returned error codes are system error conditions.

SEE ALSO

ioctl man pages

3.3.5 TD004_IOCTL_SETWAITSTATES

NAME

TD004_IOCTL_SETWAITSTATES Specify number of waitstates for programming.

DESCRIPTION

This TDRV004 control function configures the driver to use a number of waitstates during XSVF and SPI programming. This might be necessary, if the local clock (CLK1) of the onboard clock generator is configured to rather slow. The local programming interface is clocked with this frequency, which might result in errors during programming for low CLK1 frequencies and a small amount of waitstates.

A pointer to an unsigned long value must be passed to the driver by the parameter *argp*.

EXAMPLE

```
#include "tdrv004.h"

int fd;
int result;
unsigned long WaitStates;

/*
** configure driver to use 3 waitstates
*/
WaitStates = 3;
result = ioctl(fd, TD004_IOCTL_SETWAITSTATES, &WaitStates);

if (result < 0) {
    /* handle ioctl error */
}
```

ERRORS

This ioctl function returns no function specific error codes.

SEE ALSO

ioctl man pages

3.3.6 TD004_IOCS_SETCLOCK

NAME

TD004_IOCS_SETCLOCK Set clock generator parameters

DESCRIPTION

This TDRV004 control function configures the onboard clock generator. A pointer to the caller's data buffer (*TD004_CLOCK_PARAM*) is passed by the parameter *argp* to the driver. The necessary values can be calculated using the tool *Cypress CycberClocks*.

The *TD004_CLOCK_PARAM* structure has the following layout:

```
typedef struct {  
    unsigned char DeviceAddr;  
    unsigned char x09_ClkOE;  
    unsigned char x0C_DIV1SRCN;  
    unsigned char x10_InputCtrl;  
    unsigned char x40_CPumpPB;  
    unsigned char x41_CPumpPB;  
    unsigned char x42_POQcnt;  
    unsigned char x44_SwMatrix;  
    unsigned char x45_SwMatrix;  
    unsigned char x46_SwMatrix;  
    unsigned char x47_DIV2SRCN;  
} TD004_CLOCK_PARAM;
```

Members

DeviceAddr

Specifies the desired destination address. The CY27EE16 clock generator provides several EEPROM banks as well as SRAM. If TD004_CLKADR_SRAM is specified, the values are directly stored inside the volatile RAM area and take effect immediately. If TD004_CLKADR_EEPROM is specified, the values are stored in the non-volatile area of the clock generator, and the CY27EE16 loads it after the next power-up.

x09_ClkOE

Specifies which clock outputs shall be enabled.

x0C_DIV1SRCN

Specifies internal input source 1 and the corresponding frequency divider

x10_InputCtrl

Specifies value for the Input Pin Control register

x40_CPumpPB

Specifies value for Charge Pump and PB counter register

x41_CPumpPB

Specifies value for Charge Pump and PB counter register

x41_POQcnt

Specifies value for PO and Q counter register

x44_SwMatrix

Specifies value for Switching Matrix Register

x45_SwMatrix

Specifies value for Switching Matrix Register

x46_SwMatrix

Specifies value for Switching Matrix Register

x47_DIV2SRCN

Specifies internal input source 2 and the corresponding frequency divider

Please refer to the Cypress CY27EE16 user manual for detailed explanation of the above register values.

EXAMPLE

```
#include "tdrv004.h"

int fd;
int result;
int bufsize;
TD004_CLOCK_PARAM ClockParam;

/*
** Setup clock generator (SRAM):
**   CLK1: 50.0MHz      CLK2: 20.0MHz
**   CLK3: 10.0MHz     CLK4:  1.0MHz
**   CLK5:  0.2MHz     CLK6: -off-
*/
ClockParam.DeviceAddress    = TD004_CLKADR_SRAM;
ClockParam.x09_ClkOE        = 0x6f;
ClockParam.x0C_DIV1SRCN     = 0x64;
ClockParam.x10_InputCtrl    = 0x50;
ClockParam.x40_CPumpPB      = 0xc0;
ClockParam.x41_CPumpPB      = 0x03;
ClockParam.x42_POQcnt       = 0x81;
```

```
ClockParam.x44_SwMatrix      = 0x42;
ClockParam.x45_SwMatrix      = 0x9f;
ClockParam.x46_SwMatrix      = 0x3f;
ClockParam.x47_DIV2SRCN      = 0xe4;
/*
** start FPGA programming
*/
result = ioctl(fd, TD004_IOCS_SETCLOCK, &ClockParam);

if (result < 0) {
    /* handle ioctl error */
}
```

ERRORS

EINVAL	It was tried to disable CLK1. This is not allowed.
EIO	An error occurred during SPI access.
EBUSY	The device is already busy with XSVF, Reconfig or SPI action.
EFAULT	Error while copying data to or from user space.

Other returned error codes are system error conditions.

SEE ALSO

ioctl man pages

3.3.7 TD004_IOCS_SPIWRITE

NAME

TD004_IOCS_SPIWRITE Write values to clock generator.

DESCRIPTION

This TDRV004 control function writes up to 256 *unsigned char* values to a specific sub-address of a Serial Programming Interface (SPI) address. A pointer to the caller's data buffer (*TD004_SPI_BUF*) is passed by the parameter *argp* to the driver. The data section must be included inside this structure.

The *TD004_SPI_BUF* structure has the following layout:

```
typedef struct {  
    unsigned char  SpiAddr;  
    unsigned char  SubAddr;  
    unsigned long  len;  
    unsigned char  pData[1];    /* dynamically expandable */  
} TD004_SPI_BUF;
```

Members

SpiAddr

Specifies the Serial Programming Interface (SPI) address of the desired target. See file *tdrv004.h* for definitions.

SubAddr

Specifies the sub-address (starting offset).

len

This value specifies the amount of data items to write. A maximum of 256 is allowed.

pData

The values are copied from this buffer. It must be large enough to hold the specified amount of data. The data must be stored inside the structure, no pointer allowed.

Do not use this control function to setup the clockgenerator. Please use control function TD004_IOCS_SETCLOCK instead.

EXAMPLE

```
#include "tdrv004.h"

int fd;
int result;
int BufferSize;
TD004_SPI_BUF *pSpiBuf;

/*
** write 5 bytes to EEPROM block 1, offset 0x00
** allocate enough memory to hold the data structure + write data
*/
BufferSize = ( sizeof(TD004_SPI_BUF) + 5*sizeof(unsigned char) );
pSpiBuf = (TD004_SPI_BUF*)malloc( BufferSize );
pSpiBuf->SpiAddr = TD004_CLKADDR_EEBLOCK1;
pSpiBuf->SubAddr = 0x00;
pSpiBuf->len = 5;
pSpiBuf->pData[0] = 0x01;
pSpiBuf->pData[1] = 0x02;
pSpiBuf->pData[2] = 0x03;
pSpiBuf->pData[3] = 0x04;
pSpiBuf->pData[4] = 0x05;

result = ioctl(fd, TD004_IOCS_SPIWRITE, pSpiBuf);
if (result < 0) {
    /* handle ioctl error */
}
free( pSpiBuf );
```

ERRORS

EINVAL	The specified SubAddr+len exceeds 256, or len is invalid
EIO	An error occurred during SPI access.
EBUSY	The device is already busy with XSVF, Reconfig or SPI action.
EFAULT	Error while copying data to or from user space.
ENOMEM	Error getting enough internal memory for SPI data.

Other returned error codes are system error conditions.

SEE ALSO

ioctl man pages

3.3.8 TD004_IOCTL_SPIREAD

NAME

TD004_IOCTL_SPIREAD Read values from clock generator.

DESCRIPTION

This TDRV004 control function reads up to 256 *unsigned char* values from a specific sub-address of a Serial Programming Interface (SPI) address. A pointer to the caller's data buffer (*TD004_SPI_BUF*) is passed by the parameter *argp* to the driver. The data section must be included inside this structure.

The *TD004_SPI_BUF* structure has the following layout:

```
typedef struct {
    unsigned char  SpiAddr;
    unsigned char  SubAddr;
    unsigned long  len;
    unsigned char  pData[1];    /* dynamically expandable */
} TD004_SPI_BUF;
```

Members

SpiAddr

Specifies the Serial Programming Interface (SPI) address of the desired target. See file *tdrv004.h* for definitions.

SubAddr

Specifies the sub-address (starting offset).

len

This value specifies the amount of data items to read. A maximum of 256 is allowed.

pData

The values are copied to this buffer. It must be large enough to hold the specified amount of data. The data space must be located inside the structure, no pointer allowed.

EXAMPLE

```
#include "tdrv004.h"

int fd;
int result;
int BufferSize;
TD004_SPI_BUF *pSpiBuf;

/*
** read 5 bytes from EEPROM block 1, offset 0x00
** allocate enough memory to hold the data structure + read data
*/
BufferSize = ( sizeof(TD004_SPI_BUF) + 5*sizeof(unsigned char) );
pSpiBuf = (TD004_SPI_BUF*)malloc( BufferSize );
pSpiBuf->SpiAddr = TD004_CLKADDR_EEBLOCK1;
pSpiBuf->SubAddr = 0x00;
pSpiBuf->len = 5;

result = ioctl(fd, TD004_IOCTL_SPIREAD, pSpiBuf);
if (result < 0) {
    /* handle ioctl error */
}
free( pSpiBuf );
```

ERRORS

EINVAL	The specified SubAddr+len exceeds 256, or len is invalid
EIO	An error occurred during SPI access.
EBUSY	The device is already busy with XSVF, Reconfig or SPI action.
EFAULT	Error while copying data to or from user space.
ENOMEM	Error getting enough internal memory for SPI data.

Other returned error codes are system error conditions.

SEE ALSO

ioctl man pages

3.3.9 TD004_IOCS_PLXWRITE

NAME

TD004_IOCS_PLXWRITE Write 16bit value to PLX9030 EEPROM.

DESCRIPTION

This TDRV004 control function writes an *unsigned short* value to a specific PLX9030 EEPROM memory offset. A pointer to the caller's data buffer (*TD004_PLX_BUF*) is passed by the parameter *argp* to the driver.

The *TD004_PLX_BUF* structure has the following layout:

```
typedef struct {
    unsigned long   Offset;
    unsigned short  Value;
} TD004_PLX_BUF;
```

Members

Offset

Specifies the offset into the PLX9030 EEPROM, where the supplied data word should be written. The offset must be specified as even byte-address.

Following offsets are available:

Offset	Access
00h – 0Ch	R
0Eh	R / W
10h – 26h	R
28h – 36h	R / W
38h – 3Ah	R
3Ch – 4Ah	R / W
4Ch – 4Eh	R
50h – 5Eh	R / W
60h – 62h	R
64h – 7Eh	R / W
80h – 86h	R
88h - FEh	R / W

Refer to the PLX9030 User Manual for detailed information on these registers.

Value

This value specifies a 16bit word that should be written to the specified offset.

Note that the PLX9030 reloads the new configuration from the EEPROM after a PCI reset, i.e. the system must be rebooted to make PLX9030 dependent changes take effect.

EXAMPLE

```
#include "tdrv004.h"

int fd;
int result;
int BufferSize;
TD004_PLX_BUF    PlxBuf;

/*
** Change the Subsystem Vendor ID to TEWS TECHNOLOGIES (0x1498)
*/
PlxBuf.Offset = 0x0E;
PlxBuf.Value  = 0x1498

result = ioctl(fd, TD004_IOCS_PLXWRITE, &PlxBuf);

if (result < 0) {
    /* handle ioctl error */
}
```

ERRORS

EINVAL	The specified offset is invalid, or read-only
EBUSY	The device is already busy with XSVF, Reconfig or SPI action.
EFAULT	Error while copying data from user space.

Other returned error codes are system error conditions.

SEE ALSO

ioctl man pages

3.3.10 TD004_IOCG_PLXREAD

NAME

TD004_IOCG_PLXREAD Read 16bit value from PLX9030 EEPROM.

DESCRIPTION

This TDRV004 control function reads an *unsigned short* value from a specific PLX9030 EEPROM memory offset. A pointer to the caller's data buffer (*TD004_PLX_BUF*) is passed by the parameter *argp* to the driver.

The *TD004_PLX_BUF* structure has the following layout:

```
typedef struct {
    unsigned long   Offset;
    unsigned short  Value;
} TD004_PLX_BUF;
```

Members

Offset

Specifies the offset into the PLX9030 EEPROM, from where the supplied data word should be retrieved. The offset must be specified as even byte-address.

Following offsets are available:

Offset	Access
00h – 0Ch	R
0Eh	R / W
10h – 26h	R
28h – 36h	R / W
38h – 3Ah	R
3Ch – 4Ah	R / W
4Ch – 4Eh	R
50h – 5Eh	R / W
60h – 62h	R
64h – 7Eh	R / W
80h – 86h	R
88h - FEh	R / W

Refer to the PLX9030 User Manual for detailed information on these registers.

Value

This value holds the retrieved 16bit word.

EXAMPLE

```
#include "tdrv004.h"

int fd;
int result;
int BufferSize;
TD004_PLX_BUF PlxBuf;

/*
** Read Subsystem ID
*/
PlxBuf.Offset = 0x0C;

result = ioctl(fd, TD004_IOCTL_PLXREAD, &PlxBuf);

if (result < 0) {
    /* handle ioctl error */
} else {
    printf( "SubsystemVendorID = 0x%04X\n", PlxBuf.Value );
}
```

ERRORS

EINVAL	The specified offset is invalid.
EBUSY	The device is already busy with XSVF, Reconfig or SPI action.
EFAULT	Error while copying data to user space.

Other returned error codes are system error conditions.

SEE ALSO

ioctl man pages

3.3.11 TD004_IOCTL_READ_UCHAR

NAME

TD004_IOCTL_READ_UCHAR Read unsigned char values from FPGA resource.

DESCRIPTION

This TDRV004 control function reads a number of *unsigned char* values from a Memory or I/O area by using BYTE accesses. A pointer to the caller's data buffer (*TD004_MEMIO_BUF*) is passed by the parameter *argp* to the driver. This data buffer can be enlarged to the desired needs. The data section must be included inside this structure.

The *TD004_MEMIO_BUF* structure has the following layout:

```
typedef struct {  
    TD004_RESOURCE Resource;  
    unsigned long Offset;  
    unsigned long Size;  
    unsigned char pData[1]; /* dynamically expandable */  
} TD004_MEMIO_BUF;
```

Members

Resource

Specifies the desired resource to read from. The TD004_RESOURCE enumeration contains values for all possible memory and I/O areas. Both first Memory and I/O areas of the TDRV004 module are restricted and cannot be used by the application. The second found Memory area is named TD004_RES_MEM_2, the second I/O space found is named TD004_RES_IO_2 and so on.

Offset

Specifies the offset into the memory or I/O space specified by *Resource*.

Size

This value specifies the amount of data items to read.

pData

The received values are copied into this buffer. It must be large enough to hold the specified amount of data.

EXAMPLE

```
#include "tdrv004.h"

int fd;
int result;
int BufferSize;
unsigned long    BufferSize;
TD004_MEMIO_BUF *pMemIoBuf;
unsigned char    *pValues;

/*
** read 50 bytes from MemorySpace 2, offset 0x00
** allocate enough memory to hold the data structure + read data
*/
BufferSize = ( sizeof(TD004_MEMIO_BUF) + 50*sizeof(unsigned char) );
pMemIoBuf = (TD004_MEMIO_BUF*)malloc( BufferSize );
pMemIoBuf->Size      = 50;
pMemIoBuf->Resource  = TD004_RES_MEM_2;
pMemIoBuf->Offset    = 0;

result = ioctl(fd, TD004_IOCTL_READ_UCHAR, pMemIoBuf);
if (result < 0) {
    /* handle ioctl error */
} else {
    pValues = (unsigned char*)pMemIoBuf->pData;
}
free( pMemIoBuf );
```

ERRORS

EINVAL	The specified Offset+Size exceeds the available memory or I/O space.
EACCES	The specified Resource is not available for access.
EBUSY	The device is already busy with XSVF, Reconfig or SPI action.
EFAULT	Error while copying data to user space.
ENOMEM	Error getting enough internal memory for data.

Other returned error codes are system error conditions.

SEE ALSO

ioctl man pages

3.3.12 TD004_IOCTL_READ_USHORT

NAME

TD004_IOCTL_READ_USHORT Read unsigned short values from FPGA resource.

DESCRIPTION

This TDRV004 control function reads a number of *unsigned short* values from a Memory or I/O area by using WORD accesses. A pointer to the caller's data buffer (*TD004_MEMIO_BUF*) is passed by the parameter *argp* to the driver. This data buffer can be enlarged to the desired needs. The data section must be included inside this structure.

The *TD004_MEMIO_BUF* structure has the following layout:

```
typedef struct {  
    TD004_RESOURCE Resource;  
    unsigned long Offset;  
    unsigned long Size;  
    unsigned char pData[1];    /* dynamically expandable */  
} TD004_MEMIO_BUF;
```

Members

Resource

Specifies the desired resource to read from. The TD004_RESOURCE enumeration contains values for all possible memory and I/O areas. Both first Memory and I/O areas of the TDRV004 module are restricted and cannot be used by the application. The second found Memory area is named TD004_RES_MEM_2, the second I/O space found is named TD004_RES_IO_2 and so on.

Offset

Specifies the offset into the memory or I/O space specified by *Resource*.

Size

This value specifies the amount of data items to read.

pData

The received values are copied into this buffer. It must be large enough to hold the specified amount of data. The data pointer is typecasted into an *unsigned short* pointer.

EXAMPLE

```
#include "tdrv004.h"

int fd;
int result;
int BufferSize;
unsigned long    BufferSize;
TD004_MEMIO_BUF *pMemIoBuf;
unsigned short   *pValues;

/*
** read 50 16bit words from MemorySpace 2, offset 0x00
** allocate enough memory to hold the data structure + read data
*/
BufferSize = ( sizeof(TD004_MEMIO_BUF) + 50*sizeof(unsigned short) );
pMemIoBuf = (TD004_MEMIO_BUF*)malloc( BufferSize );
pMemIoBuf->Size      = 50;
pMemIoBuf->Resource  = TD004_RES_MEM_2;
pMemIoBuf->Offset    = 0;

result = ioctl(fd, TD004_IOCTL_READ_USHORT, pMemIoBuf);
if (result < 0) {
    /* handle ioctl error */
} else {
    pValues = (unsigned short*)pMemIoBuf->pData;
}
free( pMemIoBuf );
```

ERRORS

EINVAL	The specified Offset+Size exceeds the available memory or I/O space.
EACCES	The specified Resource is not available for access.
EBUSY	The device is already busy with XSVF, Reconfig or SPI action.
EFAULT	Error while copying data to user space.
ENOMEM	Error getting enough internal memory for data.

Other returned error codes are system error conditions.

SEE ALSO

ioctl man pages

3.3.13 TD004_IOCTL_READ_ULONG

NAME

TD004_IOCTL_READ_ULONG Read unsigned long values from FPGA resource.

DESCRIPTION

This TDRV004 control function reads a number of *unsigned long* values from a Memory or I/O area by using DWORD accesses. A pointer to the caller's data buffer (*TD004_MEMIO_BUF*) is passed by the parameter *argp* to the driver. This data buffer can be enlarged to the desired needs. The data section must be included inside this structure.

The *TD004_MEMIO_BUF* structure has the following layout:

```
typedef struct {  
    TD004_RESOURCE Resource;  
    unsigned long Offset;  
    unsigned long Size;  
    unsigned char pData[1]; /* dynamically expandable */  
} TD004_MEMIO_BUF;
```

Members

Resource

Specifies the desired resource to read from. The TD004_RESOURCE enumeration contains values for all possible memory and I/O areas. Both first Memory and I/O areas of the TDRV004 module are restricted and cannot be used by the application. The second found Memory area is named TD004_RES_MEM_2, the second I/O space found is named TD004_RES_IO_2 and so on.

Offset

Specifies the offset into the memory or I/O space specified by *Resource*.

Size

This value specifies the amount of data items to read.

pData

The received values are copied into this buffer. It must be large enough to hold the specified amount of data. . The data pointer is typecasted into an *unsigned long* pointer.

EXAMPLE

```
#include "tdrv004.h"

int fd;
int result;
int BufferSize;
unsigned long BufferSize;
TD004_MEMIO_BUF *pMemIoBuf;
unsigned long *pValues;

/*
** read 50 32bit dwords from MemorySpace 2, offset 0x00
** allocate enough memory to hold the data structure + read data
*/
BufferSize = ( sizeof(TD004_MEMIO_BUF) + 50*sizeof(unsigned long) );
pMemIoBuf = (TD004_MEMIO_BUF*)malloc( BufferSize );
pMemIoBuf->Size = 50;
pMemIoBuf->Resource = TD004_RES_MEM_2;
pMemIoBuf->Offset = 0;

result = ioctl(fd, TD004_IOCTL_READ_ULONG, pMemIoBuf);
if (result < 0) {
    /* handle ioctl error */
} else {
    pValues = (unsigned long*)pMemIoBuf->pData;
}
free( pMemIoBuf );
```

ERRORS

EINVAL	The specified Offset+Size exceeds the available memory or I/O space.
EACCES	The specified Resource is not available for access.
EBUSY	The device is already busy with XSVF, Reconfig or SPI action.
EFAULT	Error while copying data to user space.
ENOMEM	Error getting enough internal memory for data.

Other returned error codes are system error conditions.

SEE ALSO

ioctl man pages

3.3.14 TD004_IOCS_WRITE_UCHAR

NAME

TD004_IOCS_WRITE_UCHAR Write unsigned char values to FPGA resource.

DESCRIPTION

This TDRV004 control function writes a number of *unsigned char* values to a Memory or I/O area by using BYTE accesses. A pointer to the caller's data buffer (*TD004_MEMIO_BUF*) is passed by the parameter *argp* to the driver. This data buffer can be enlarged to the desired needs. The data section must be included inside this structure.

The *TD004_MEMIO_BUF* structure has the following layout:

```
typedef struct {
    TD004_RESOURCE Resource;
    unsigned long Offset;
    unsigned long Size;
    unsigned char pData[1]; /* dynamically expandable */
} TD004_MEMIO_BUF;
```

Members

Resource

Specifies the desired resource to write to. The TD004_RESOURCE enumeration contains values for all possible memory and I/O areas. Both first Memory and I/O areas of the TDRV004 module are restricted and cannot be used by the application. The second found Memory area is named TD004_RES_MEM_2, the second I/O space found is named TD004_RES_IO_2 and so on.

Offset

Specifies the offset into the memory or I/O space specified by *Resource*.

Size

This value specifies the amount of data items to write.

pData

The values are copied from this buffer. It must be large enough to hold the specified amount of data.

EXAMPLE

```
#include "tdrv004.h"

int fd;
int result;
int BufferSize;
unsigned long BufferSize;
TD004_MEMIO_BUF *pMemIoBuf;
unsigned char *pValues;

/*
** write 10 byte to MemorySpace 2, offset 0x00
** allocate enough memory to hold the data structure + write data
*/
BufferSize = ( sizeof(TD004_MEMIO_BUF) + 10*sizeof(unsigned char) );
pMemIoBuf = (TD004_MEMIO_BUF*)malloc( BufferSize );
pMemIoBuf->Size = 10;
pMemIoBuf->Resource = TD004_RES_MEM_2;
pMemIoBuf->Offset = 0;
pValues = (unsigned char*)pMemIoBuf->pData;
pValues[0] = 0x01;
pValues[1] = 0x02;
...

result = ioctl(fd, TD004_IOCS_WRITE_UCHAR, pMemIoBuf);
if (result < 0) {
    /* handle ioctl error */
}
free( pMemIoBuf );
```

ERRORS

EINVAL	The specified Offset+Size exceeds the available memory or I/O space.
EACCES	The specified Resource is not available for access.
EBUSY	The device is already busy with XSVF, Reconfig or SPI action.
EFAULT	Error while copying data to user space.
ENOMEM	Error getting enough internal memory for data.

Other returned error codes are system error conditions.

SEE ALSO

ioctl man pages

3.3.15 TD004_IOCS_WRITE_USHORT

NAME

TD004_IOCS_WRITE_USHORT Write unsigned short values to FPGA resource.

DESCRIPTION

This TDRV004 control function writes a number of *unsigned short* values to a Memory or I/O area by using WORD accesses. A pointer to the caller's data buffer (*TD004_MEMIO_BUF*) is passed by the parameter *argp* to the driver. This data buffer can be enlarged to the desired needs. The data section must be included inside this structure.

The *TD004_MEMIO_BUF* structure has the following layout:

```
typedef struct {
    TD004_RESOURCE Resource;
    unsigned long Offset;
    unsigned long Size;
    unsigned char pData[1]; /* dynamically expandable */
} TD004_MEMIO_BUF;
```

Members

Resource

Specifies the desired resource to write to. The TD004_RESOURCE enumeration contains values for all possible memory and I/O areas. Both first Memory and I/O areas of the TDRV004 module are restricted and cannot be used by the application. The second found Memory area is named TD004_RES_MEM_2, the second I/O space found is named TD004_RES_IO_2 and so on.

Offset

Specifies the offset into the memory or I/O space specified by *Resource*.

Size

This value specifies the amount of data items to write.

pData

The values are copied from this buffer. It must be large enough to hold the specified amount of data. The data pointer is typecasted into an *unsigned short* pointer.

EXAMPLE

```
#include "tdrv004.h"

int fd;
int result;
int BufferSize;
unsigned long BufferSize;
TD004_MEMIO_BUF *pMemIoBuf;
unsigned short *pValues;

/*
** write 10 16bit words to MemorySpace 2, offset 0x00
** allocate enough memory to hold the data structure + write data
*/
BufferSize = ( sizeof(TD004_MEMIO_BUF) + 10*sizeof(unsigned short) );
pMemIoBuf = (TD004_MEMIO_BUF*)malloc( BufferSize );
pMemIoBuf->Size = 10;
pMemIoBuf->Resource = TD004_RES_MEM_2;
pMemIoBuf->Offset = 0;
pValues = (unsigned char*)pMemIoBuf->pData;
pValues[0] = 0x0001;
pValues[1] = 0x0002;
...

result = ioctl(fd, TD004_IOCS_WRITE_USHORT, pMemIoBuf);
if (result < 0) {
    /* handle ioctl error */
}
free( pMemIoBuf );
```

ERRORS

EINVAL	The specified Offset+Size exceeds the available memory or I/O space.
EACCES	The specified Resource is not available for access.
EBUSY	The device is already busy with XSVF, Reconfig or SPI action.
EFAULT	Error while copying data to user space.
ENOMEM	Error getting enough internal memory for data.

Other returned error codes are system error conditions.

SEE ALSO

ioctl man pages

3.3.16 TD004_IOCS_WRITE_ULONG

NAME

TD004_IOCS_WRITE_ULONG Write unsigned long values to FPGA resource.

DESCRIPTION

This TDRV004 control function writes a number of *unsigned long* values to a Memory or I/O area by using DWORD accesses. A pointer to the caller's data buffer (*TD004_MEMIO_BUF*) is passed by the parameter *argp* to the driver. This data buffer can be enlarged to the desired needs. The data section must be included inside this structure.

The *TD004_MEMIO_BUF* structure has the following layout:

```
typedef struct {
    TD004_RESOURCE Resource;
    unsigned long Offset;
    unsigned long Size;
    unsigned char pData[1]; /* dynamically expandable */
} TD004_MEMIO_BUF;
```

Members

Resource

Specifies the desired resource to write to. The TD004_RESOURCE enumeration contains values for all possible memory and I/O areas. Both first Memory and I/O areas of the TDRV004 module are restricted and cannot be used by the application. The second found Memory area is named TD004_RES_MEM_2, the second I/O space found is named TD004_RES_IO_2 and so on.

Offset

Specifies the offset into the memory or I/O space specified by *Resource*.

Size

This value specifies the amount of data items to write.

pData

The values are copied from this buffer. It must be large enough to hold the specified amount of data. The data pointer is typecasted into an *unsigned long* pointer.

EXAMPLE

```
#include "tdrv004.h"

int fd;
int result;
int BufferSize;
unsigned long BufferSize;
TD004_MEMIO_BUF *pMemIoBuf;
unsigned long *pValues;

/*
** write 10 32bit dwords to MemorySpace 2, offset 0x00
** allocate enough memory to hold the data structure + write data
*/
BufferSize = ( sizeof(TD004_MEMIO_BUF) + 10*sizeof(unsigned long) );
pMemIoBuf = (TD004_MEMIO_BUF*)malloc( BufferSize );
pMemIoBuf->Size = 10;
pMemIoBuf->Resource = TD004_RES_MEM_2;
pMemIoBuf->Offset = 0;
pValues = (unsigned long*)pMemIoBuf->pData;
pValues[0] = 0x00000001;
pValues[1] = 0x00000002;
...

result = ioctl(fd, TD004_IOCS_WRITE_ULONG, pMemIoBuf);
if (result < 0) {
    /* handle ioctl error */
}
free( pMemIoBuf );
```

ERRORS

EINVAL	The specified Offset+Size exceeds the available memory or I/O space.
EACCES	The specified Resource is not available for access.
EBUSY	The device is already busy with XSVF, Reconfig or SPI action.
EFAULT	Error while copying data to user space.
ENOMEM	Error getting enough internal memory for data.

Other returned error codes are system error conditions.

SEE ALSO

ioctl man pages

4 Diagnostic

If the TDRV004 does not work properly it is helpful to get some status information from the driver respective kernel.

The Linux */proc* file system provides information about kernel, resources, driver, devices, and so on. The following screen dumps displays information of a correct running TDRV004 driver and TPMC630 product family devices (see also the proc man pages).

```
# cat /proc/pci
. . .
Bus 0, device 11, function 0:
  Signal processing controller: PCI device 1498:0276 (TEWS Datentechnik
GmbH) (rev 0).
  IRQ 11.
  Non-prefetchable 32 bit memory at 0xec020000 [0xec02007f].
  I/O at 0xd400 [0xd47f].
  Non-prefetchable 32 bit memory at 0xeb000000 [0xebffffff].
```

```
# cat /proc/devices
Character devices:
  1 mem
  2 pty
  . . .
136 pts
162 raw
254 tdrv004drv
```

```
# cat /proc/ioports
. . .
d000-d03f : Intel Corp. 82557/8/9 [Ethernet Pro 100]
  d000-d03f : e100
d400-d47f : PCI device 1498:0276 (TEWS Datentechnik GmbH)
. . .
```

```
# cat /proc/iomem
00000000-0009f7ff : System RAM
. . .
eb000000-ebffffff : PCI device 1498:0276 (TEWS Datentechnik GmbH)
ec000000-ec01ffff : Intel Corp. 82557/8/9 [Ethernet Pro 100]
  ec000000-ec01ffff : e100
ec020000-ec02007f : PCI device 1498:0276 (TEWS Datentechnik GmbH)
. . .
```